

Steps to change pin deck

1. Coin up a game to activate air compressor
2. Manually override the **Pin Lift** valve to lift pins up (Push in and lock silver knob).

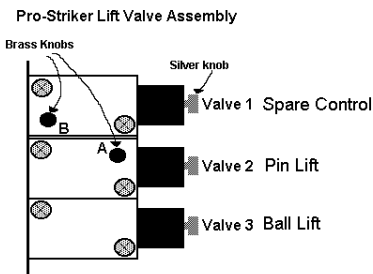


Figure 1

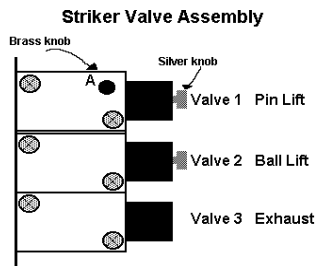


Figure 1

3. Remove the sensors from the I/O Board.
4. Remove the four screws holding the pin deck down.
5. Cut any straps holding the sensors wires.
6. Remove the old pin deck.
7. Lay new pin deck in game.
8. Connect sensors to I/O board.
9. Lower pins to ensure pins cover the orange sensors.
10. Cancel the manual override of the **Pin Lift** valve (Turn silver knob counter clockwise).
11. Play game.
12. Make sure all sensors work accordingly to their corresponding pin.
13. Secure pin deck with four wood screws
14. Take old pin deck apart and RETURN ONLY THE SENSORS to Design Plus Industries 6311 W. Development Drive, Peoria, IL 61604.

I/O Board Pin Outs

Striker

J4	Pin 9
J5	Pin 10
J6	Pin 7
J7	Pin 8
J8	Pin 1
J9	Pin 6
J10	Pin 3
J11	Pin 2
J12	Pin 5
J13	Pin 4

Pro Striker

J1	Pin 1
J2	Pin 2
J3	Pin 3
J4	Pin 4
J5	Pin 5
J6	Pin 6
J7	Pin 7
J8	Pin 8
J9	Pin 9
J10	Pin 10

Questions call Design Plus at 309-697-9778